

www.codecorp.com



User Manual
 Manuel d'Utilisateur
 Manual de Usuario
 Manual do Usuario
 Benutzerhandbuch
 コーポレート
 用户手册
 사용자 매뉴얼



Configuration Guide
 Guia de Configuración
 Guia de Configuración
 Programmiehrhandbuch
 設定ガイド表
 配置指南
 설정 가이드



YouTube.com/codecorporation






REVOLUTIONIZING BARCODE READING
code[®]

QUICK START GUIDE
CR950




code[®]
 REVOLUTIONIZING BARCODE READING

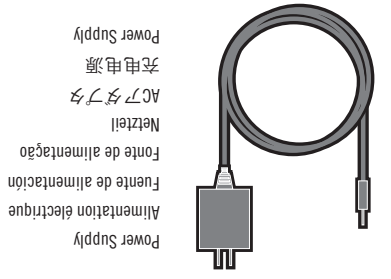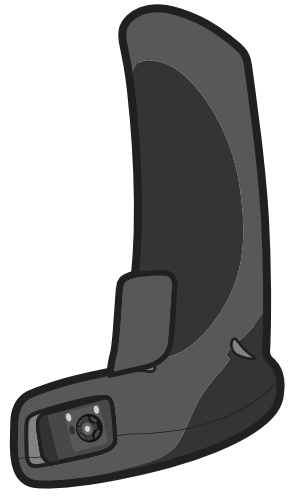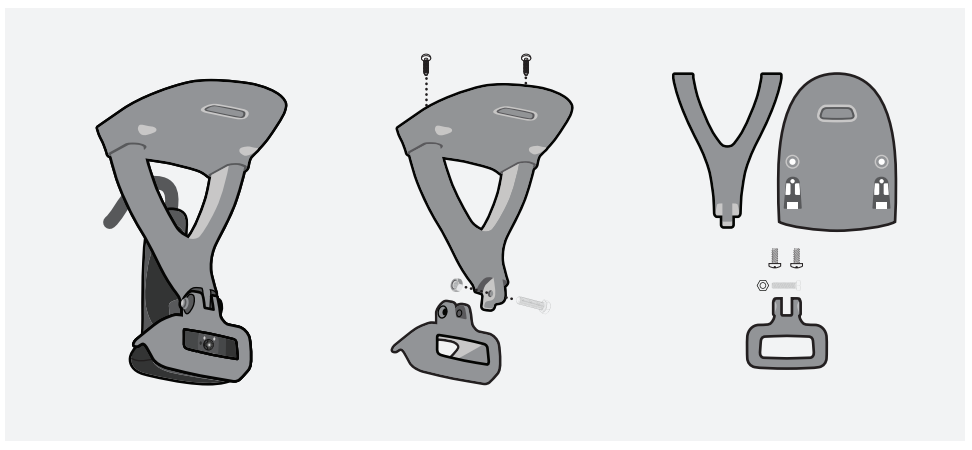

Power Supply
 Fuente de alimentación eléctrica
 Alimentation électrique
 Fonte de alimentação
 Netzteil
 ACアダプタ
 充电电源
 Power Supply




RS232 Cable
 Cable de RS232
 Cable rs232
 Cabo RS232
 RS232-Kabel
 RS232 ケーブル
 RS232 线缆
 RS232 케이블

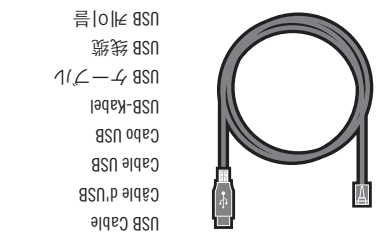


USB Cable
 Cable d'USB
 Cable USB
 Cabo USB
 USB-Kabel
 USB ケーブル
 USB 线缆
 USB 케이블

Included if Ordered
 Inclus si comendé Incluido si así lo ordena Includos se ordenou
 Inbegriffen, wenn bestellt 注文時に追加 包括若订购 주문시 포함

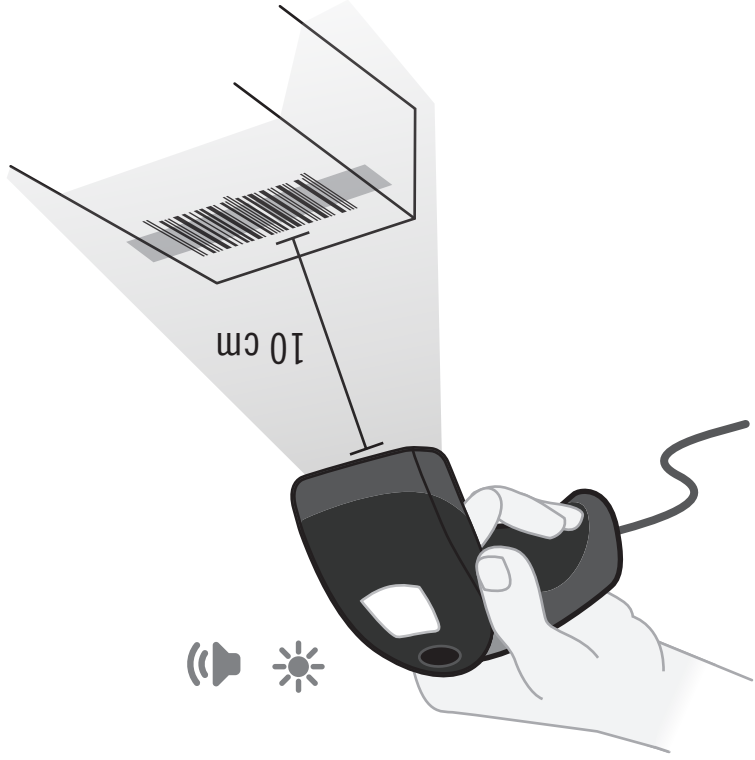


Scanning
 Lecture Escaneo Leitura Scannen
 स्कॅनिंग 扫描中 스캐닝

- ④ 2x
- ③
- ② 3 Sec.
- ①

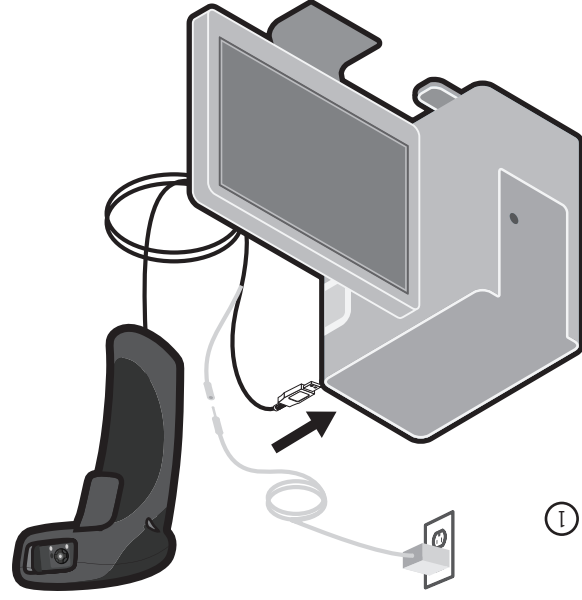

Power On
 Allumer Encender Ligar Einschalten
 電源オン 電源开启 Power on

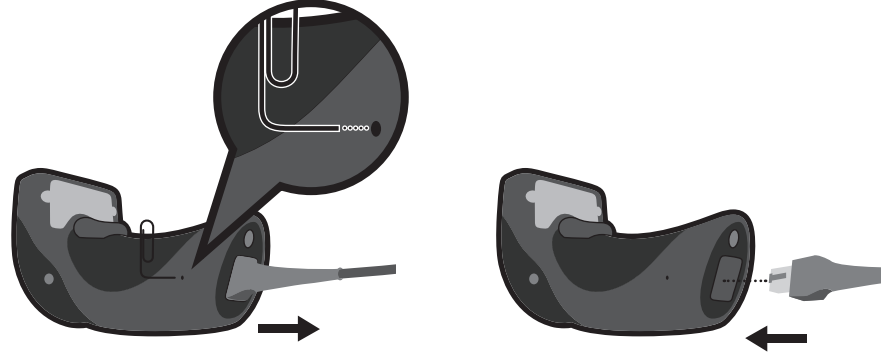

Set Up
 Installation Instalación Instalação
 Einrichten 設定 設置 刈呂